

WORK INSTRUCTION

Document No.	WI-M1-PR-017
Section	Mini-Warehouse
Revision No.	00
Effective Date	01-Aug-20
Page No.	1 of 1

Process Name	Care Label Printer (SNAP 500)	Objective	Guide the Operator in operating the SNAP 500 Care Label Printer
--------------	-------------------------------	-----------	---

User
Adicomp Printing Operator

Previous Process

N/A

Next Process

Sewing Line

PPE



Wear hairnet



Wear Ear



Wear face mask

Legend



Find / search / reading



Inspection



Safety Point



Attach Information



Storage

TOTAL CYCLE TIME

871 sec

1
Task:




TT TIME:
180 sec

Description:
Open Avery Dennison Website to find PO# and click Submit Selection/Download to retrieve PO# Data.
(Opena ang Avery Dennison Website para mapangita ang PO# ug i-click ang Submit Selection para mabawi ang PO# ug i-click ang Submit Selection para mabawi ang PO#)

2
Task:




TT TIME:
600 sec

Description:
Open PCMate Platinum App and log-in your Account.
(Opena ang PCMate Platinum App og i-sulod imu Account)


3
Task:




TT TIME:
48 sec

Description:
Switch on the Printing Machine and wait for the Printing Icons to show on the screen.
(I-on ang Printing Machine og huwata ang Printing Icons mugawas sa screen.)

4
Task:

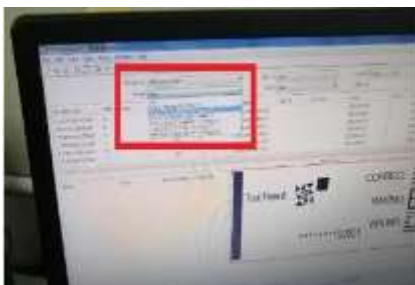

TT TIME:
30 sec

Description:
Click Design Set, Design, Show Print Module and find the PO# data downloaded from the Website.
(i-kilk ang Design Set, Desgn, Show Print Module para mapangita ang PO# data na download gikan sa Website)

5
Task:




TT TIME:
1 sec

Description:
Click the Printing Icon and wait until it finished printing.
(i-click ang Printing Icon ug huwata mahuman ug print.)

6
Task:




TT TIME:
12 sec

Description:
Turn off the Machine and Unlock the Roller to clean using clean fabric with alcohol.
(Palonga ang Makina ug Ablihi ang Roller para malimpyohan gamit ang limpyo na fabric og alcohol.)

Prepared by:

ME Analyst

Eudelyn Salaritan
ME Supervisor

Reviewed by:

Nicholas Chen
CMD Manager

Armond Garcia
EHSS Manager

Daniel Hsieh
QMS Manager

Sasa Chang
ME Manager